

PRO-911

Caring for everyone

ORAL IRRIGATOR
IRIGATORUL ORAL
SUILLIGATOR
BURNOS IRRIGATORUS
MUTES DOBMA IRRIGATORUS

EN Operating Instructions

Thank you for purchasing PRO-911 oral irrigator from B.Well. The device effectively cleans the spaces between teeth and removes plaque. It precludes dental tartar occurrence and is perfect for prevention of tooth decay and periodontal diseases. PRO-911 oral irrigator is a necessary device for oral care if you have dental bridges, implants, crowns and braces. It can also be used for gum massage that improves blood circulation and promotes gum healing. Three operating modes ensure the maximum efficiency of the unit.

- #### 1. SAFETY PRECAUTIONS
- WARNING** Never use the following solutions for oral irrigation:
 - Substances and solutions containing suspended particles (decoctions, suspensions, infusions, etc.).
 - Solutions with high viscosity, gradually shifting to front teeth.
 - Oil-containing solutions. Oil is an organic solvent and its use may have eroding effect on the section hose and components of the device.
 - Solutions that contain aggressive chemicals (such as potassium permanganate, iodine and other).
 - Toothpaste.
 - Salt solutions.

Allow for oral irrigation:

- Filtered water (up to 40 °C). Use filtered water if you have poor quality tap water in your region.
- Special rinses for use with irrigator / common mouth rinse solution (always mixed in a definite ratio).
- Special rinses for use with irrigator / common mouth rinse solution (always mixed in a definite ratio).
- Antiseptic solutions (chlorhexidine, miramistin and other antiseptic drugs prescribed by your physician).

- CAUTION** If special solutions for irrigator / common mouth rinse solution are applied, be sure to observe the following instructions:
 - Rinse the mouth with fresh water after using such fill in the water tank with water and run an extra irrigation cycle, by draining the appliance through the nozzle.
 - Pay attention to the expiry dates of permitted solutions. Never use outdated solutions.
- CAUTION**
 - The device has built-in batteries. Do not throw it into fire, don't heat, and don't charge, use or leave the device in locations with high air temperature.
 - Never use the adapter with damaged cord or power plug.
- PRECAUTIONS:**
 - Do not use the device with the charging adapter in the bath or in the shower.
 - Never leave, nor keep the charging adapter where it can fall into a bathtub, a sink or a WC pan. This may result in electrocution or fire.
 - Do not try to reach an irrigator that has fallen into water, unplug first.
 - Do not submerge the irrigator into water.
 - Never use the device with damaged charging adapter, or if the power cord is loosely connected to the power socket. This may result in electrocution, short-circuit or fire.
 - Never shake, bend, pull or twist the power cord with excessive force. Do not place heavy objects onto the power cord and do not place the cord between such objects. This may result in electrocution or fire.
 - Always disconnect the charging adapter from water, and never wash it with water. This may result in electrocution or short-circuit.
 - Do not touch or disconnect the adapter from the power socket with wet hands. This may result in electrocution.
 - Store the device out of reach of children. The failure to observe this rule may result in accidents and hazardous situations, for instance, accidental swallowing of the accessories or disassembly parts of the unit by a child.
 - Regularly clean the power plug and the charging adaptor to avoid dust ingress on them. The failure to observe this rule may result in fire due to damaged insulation case in the power plug.
 - During maintenance, plug charging device out of the power socket. The failure to observe this rule may result in electrocution.
 - Check that the device works from a power source with the relevant rated voltage everytime you use it. The failure to observe this rule may result in electrocution or fire.
 - Never modify the device, disassemble or repair it on your own. This may result in fire, electrocution or injury. If repair is needed (for instance, to replace a battery) contact the authorised service centre of B.Well.
 - Do not use the unit where it can fall or break into pieces (eg. on a sink).
 - Do not use the device without water.
 - Never use the adapter when connected to the power socket.

Water tank

- Rinse the tank with water.
- After cleaning drain water from the tank.
- If you do not intend to use the device for a long time or longer, dry the tank from the inside and outside. Use only soft, pH neutral detergent for cleaning.

Nozzle

- Rinse with water and wipe out with a soft cloth.
- The recommended nozzle replacement interval is 6 months.

Suction hose

- Rinse with water, wipe out with a soft cloth.
- Do not bend, pull or twist.

- #### 9. POTENTIAL PROBLEMS
- | Problem | Cause | Remedy |
|--|---|---|
| Irrigator does not operate | You have just purchased the device or it has not been used for more than 3 months | Charge the battery for 24 hours before first use, and then for 4 hours. |
| Irrigator operates only for several minutes after charging | The battery fully cycles or about to end | Contact the service center. |
| Low water pressure | The nozzle is clogged | Replace the nozzle. |
| Water does not come from nozzle | The nozzle is not inserted correctly | Check the battery for 24 hours |
| There's water leakage between the nozzle and the device | The nozzle is not inserted correctly | Check the nozzle is inserted correctly |
| Water leaks from the device | The seal is damaged | Contact the service and consulting center. |
| Water leaks from the device | Incorrect use of the device | Use the device in strict accordance with this operating manual. |

10. BATTERY AND DEVICE DISPOSAL

Upon expiry of the device operating life and prior to disposal be sure to remove the batteries. Do not throw the eye and hand protector while removing the battery. Dispose of the battery separately from the main electronic unit. In case of questions related to battery removal from the electronic unit, please contact the service center or call the helpline.

Environmental protection and recycling:

The device is fitted with lithium-ion battery. Please make sure that the battery is disposed of in an officially designated location, if it is over one year old. Do not disassemble or replace batteries by keeping the device. We have replaced only an authorised service center. The device itself must be disposed of in accordance with applicable regulations and must not be disposed of with household wastes.

11. SPECIFICATIONS

Battery charging time:	24 hours before first use, then within 4 hours.
Battery operating life:	up to 1500 cycles (charger/discharger)
Run time on one charge:	60 minutes
Dimensions (w x h x d):	265 x 195 x 79 mm
Weight:	217 g
Water tank capacity:	500 ml
Operating time with full tank:	With standard mode: 40-60 sec With soft mode: 85 sec With manual mode: 100 sec
Water pulse frequency:	1400-1800 pulses per minute
Minimum/maximum jet pressure:	200.8- 726.8 kPa
Auto power off:	in 2 minutes of running
Storage conditions:	from -10°C to +40°C, RH: 85% max.
Use conditions:	from -10°C to +40°C, RH: 85% max.

Protect the device from drops and strong shocks. Keep the device away from high temperature areas and avoid direct sunlight.

12. EXPLANATION OF SYMBOLS FROM PACKAGE AND LABEL

READ INSTRUCTIONS BEFORE USE	DISPOSAL (RECYCLING) COLLECTION	CLASS EQUIPMENT	CE MARK	HOLDING NUMBER PROTECTION RATE
------------------------------	---------------------------------	-----------------	---------	--------------------------------

SN	REF	OPERATING/CHARGING TEMPERATURE	STORAGE/CONDITION TEMPERATURE	LOT
SERIAL NUMBER	ARTICLE NUMBER	10°C - 40°C	-10°C - 40°C	Batch number

The device production date is coded in its label, in the serial number (SN). The first two digits mean the week of manufacture, the second two figures - the year of manufacture.

STANDARD NOZZLES FOR PRO-911 irrigator

- ORTHODONTIC** nozzle: Ideal for cleaning bridges, braces and crowns. Effectively clean all components of artificial structures. Recommended period of use before replacement - 6 months.
- TONGUE CLEANING** nozzle: Suitable for daily tongue cleaning. Remove bacterial plaque and freshen breath. Recommended period of use before replacement 6 months.
- PERIODONTAL** nozzle: Designed for cleaning gum margin and gingival pockets, as well as for cleaning denture surface under prosthesis and dental bridges. Recommended period of use before replacement - 6 months.

ORTHODONTIC Nozzle for PRO-911 irrigator

Ideal for cleaning bridges, braces and crowns. Effectively clean all components of artificial structures. Recommended period of use before replacement - 6 months.

TONGUE CLEANING Nozzle for PRO-911 irrigator

Suitable for daily tongue cleaning. Remove bacterial plaque and freshen breath. Recommended period of use before replacement 6 months.

PERIODONTAL Nozzle for PRO-911 irrigator

Designed for cleaning gum margin and gingival pockets, as well as for cleaning denture surface under prosthesis and dental bridges. Recommended period of use before replacement - 6 months.

IRRIGATOR nozzles PRO-911 for IMPLANTS, BRIDGES, CROWNS, VENEERS

Designed for delicate cleaning of the surface of implants, bridges, crowns and veneers.

GETTING READY TO WORK

Press On/Off button to switch the device on/off. Press Mode button to select the desired water jet mode (normal, soft, pulse). The mode selected will be shown by the mode indicator. If you want to use a different mode press the mode switch until it changes to the desired setting. Pressing the mode switch will change the mode from Normal to Soft and Pulse.

NOTE: When you use the device for the first time, press the On/Off button to turn it on and test each of the water jet modes with the tank filled with water.

MODES OF OPERATION

The modes causes a change in the water jet pressure setting and is reflected on the side panel of the device by the respective mode indicator.

- Normal mode** is designed for effective oral cleaning, removal of food particles.
- Soft mode** is designed for gentle and delicate cleaning of sensitive teeth and gums.
- Pulse mode** is designed for cleaning and massaging gums.
- CHARGE** - When charging is complete, all the three indicators will light up continuously. When the device has finished charging, all three indicators will light up continuously.

5. CHARGING THE DEVICE

To charge the device, use the USB cable that is included in the set and the adapter that is not included after removing the cap for the charging socket. It is also possible to use other chargers (power banks). It is also possible to use other Micro USB chargers. Only certified chargers with a 5V, 1000 mA DC output voltage.

While the irrigator is charging, all indicators on the side panel will flash alternately. When charging is complete, all the three indicators will light up continuously. If the indicator flashes during the charging, it means that the device must be recharged.

After charging is completed, close the charging socket with a cap.

6. USING THE DEVICE

Insert the nozzle into the relevant recess of the main unit. To extract the nozzle, press the nozzle release button and pull the nozzle upwards. Fill the tank with water by any one of the suggested methods.

NOTE: The device must be charged before first use. Using the device while charging is prohibited.

Press On/Off button to switch the device on/off. Press Mode button to select the desired water jet mode (normal, soft, pulse). The mode selected will be shown by the mode indicator. If you want to use a different mode press the mode switch until it changes to the desired setting. Pressing the mode switch will change the mode from Normal to Soft and Pulse.

NOTE: When you use the device for the first time, press the On/Off button to turn it on and test each of the water jet modes with the tank filled with water.

MODES OF OPERATION

The modes causes a change in the water jet pressure setting and is reflected on the side panel of the device by the respective mode indicator.

- Normal mode** is designed for effective oral cleaning, removal of food particles.
- Soft mode** is designed for gentle and delicate cleaning of sensitive teeth and gums.
- Pulse mode** is designed for cleaning and massaging gums.
- CHARGE** - When charging is complete, all the three indicators will light up continuously. When the device has finished charging, all three indicators will light up continuously.

5. CHARGING THE DEVICE

To charge the device, use the USB cable that is included in the set and the adapter that is not included after removing the cap for the charging socket. It is also possible to use other chargers (power banks). It is also possible to use other Micro USB chargers. Only certified chargers with a 5V, 1000 mA DC output voltage.

While the irrigator is charging, all indicators on the side panel will flash alternately. When charging is complete, all the three indicators will light up continuously. If the indicator flashes during the charging, it means that the device must be recharged.

After charging is completed, close the charging socket with a cap.

6. USING THE DEVICE

Insert the nozzle into the relevant recess of the main unit. To extract the nozzle, press the nozzle release button and pull the nozzle upwards. Fill the tank with water by any one of the suggested methods.

NOTE: The device must be charged before first use. Using the device while charging is prohibited.

Press On/Off button to switch the device on/off. Press Mode button to select the desired water jet mode (normal, soft, pulse). The mode selected will be shown by the mode indicator. If you want to use a different mode press the mode switch until it changes to the desired setting. Pressing the mode switch will change the mode from Normal to Soft and Pulse.

NOTE: When you use the device for the first time, press the On/Off button to turn it on and test each of the water jet modes with the tank filled with water.

MODES OF OPERATION

The modes causes a change in the water jet pressure setting and is reflected on the side panel of the device by the respective mode indicator.

- Normal mode** is designed for effective oral cleaning, removal of food particles.
- Soft mode** is designed for gentle and delicate cleaning of sensitive teeth and gums.
- Pulse mode** is designed for cleaning and massaging gums.
- CHARGE** - When charging is complete, all the three indicators will light up continuously. When the device has finished charging, all three indicators will light up continuously.

5. CHARGING THE DEVICE

To charge the device, use the USB cable that is included in the set and the adapter that is not included after removing the cap for the charging socket. It is also possible to use other chargers (power banks). It is also possible to use other Micro USB chargers. Only certified chargers with a 5V, 1000 mA DC output voltage.

While the irrigator is charging, all indicators on the side panel will flash alternately. When charging is complete, all the three indicators will light up continuously. If the indicator flashes during the charging, it means that the device must be recharged.

After charging is completed, close the charging socket with a cap.

6. USING THE DEVICE

Insert the nozzle into the relevant recess of the main unit. To extract the nozzle, press the nozzle release button and pull the nozzle upwards. Fill the tank with water by any one of the suggested methods.

NOTE: The device must be charged before first use. Using the device while charging is prohibited.

Press On/Off button to switch the device on/off. Press Mode button to select the desired water jet mode (normal, soft, pulse). The mode selected will be shown by the mode indicator. If you want to use a different mode press the mode switch until it changes to the desired setting. Pressing the mode switch will change the mode from Normal to Soft and Pulse.

NOTE: When you use the device for the first time, press the On/Off button to turn it on and test each of the water jet modes with the tank filled with water.

MODES OF OPERATION

The modes causes a change in the water jet pressure setting and is reflected on the side panel of the device by the respective mode indicator.

- Normal mode** is designed for effective oral cleaning, removal of food particles.
- Soft mode** is designed for gentle and delicate cleaning of sensitive teeth and gums.
- Pulse mode** is designed for cleaning and massaging gums.
- CHARGE** - When charging is complete, all the three indicators will light up continuously. When the device has finished charging, all three indicators will light up continuously.

5. CHARGING THE DEVICE

To charge the device, use the USB cable that is included in the set and the adapter that is not included after removing the cap for the charging socket. It is also possible to use other chargers (power banks). It is also possible to use other Micro USB chargers. Only certified chargers with a 5V, 1000 mA DC output voltage.

While the irrigator is charging, all indicators on the side panel will flash alternately. When charging is complete, all the three indicators will light up continuously. If the indicator flashes during the charging, it means that the device must be recharged.

After charging is completed, close the charging socket with a cap.

6. USING THE DEVICE


Insert the nozzle into the relevant recess of the main unit. To extract the nozzle, press the nozzle release button and pull the nozzle upwards. Fill the tank with water by any one of the suggested methods.

NOTE: The device must be charged before first use. Using the device while charging is prohibited.

Press On/Off button to switch the device on/off. Press Mode button to select the desired water jet mode (normal, soft, pulse). The mode selected will be shown by the mode indicator. If you want to use a different mode press the mode switch until it changes to the desired setting. Pressing the mode switch will change the mode from Normal to Soft and Pulse.

NOTE: When you use the device for the first time, press the On/Off button to turn it on and test each of the water jet modes with the tank filled with water.

- Do not operate the device without water, save when pouring out any remaining water after use.
- Do not use the device without water may result in a malfunction.
- Before pressing the power switch place the nozzle into your mouth. Bend over a washbasin and hold the device upright at the same directing the nozzle into the mouth. Slightly close your mouth during irrigation to prevent splashing.
- The device starts working in the preselected mode. Pressing the mode switch will change the mode from Normal to Soft and Pulse.
- Direct the jet as more perpendicular into the space between the teeth, the gingival crevice as possible. Slowly shift along the teeth.
- Pay particular attention to cleaning of the interdental space using the gingival crevice brackets. For better results start cleaning from the interdental space between the front teeth. Follow along gums, stopping around gaps between teeth. Continue until all zones around and between the teeth are fully cleaned. Always keep 10-15 cm between the oral irrigator and your mouth. Never replace the nozzle. Clean your teeth or artificial denture for at least five minutes after meals, and then use the unit.
- After use, press On/Off button to turn off the irrigator and remove it from the mouth.

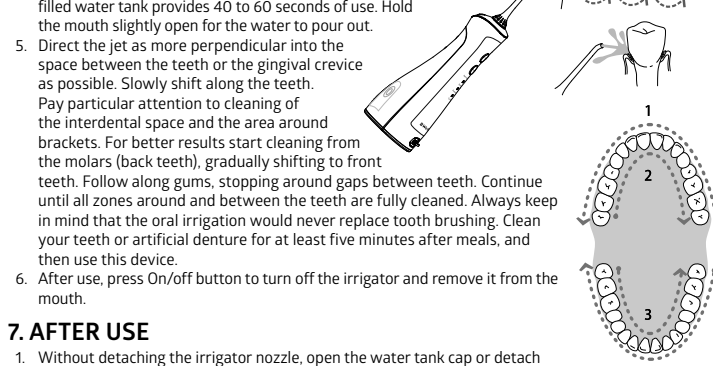

7. AFTER USE

- Without detaching the irrigator nozzle, open the water tank cap or detach the nozzle and drain water.
- Turn the device for a few seconds to drain the remaining water.
- Wipe the irrigator with a dry cloth.

8. CARE AND CLEANING

Cleaning

Turn off the device, detach the water tank and the nozzle. When washing, never use water with temperature above 50 °C.

Use only soft, pH neutral detergents to clean the device. Never use caustic soda or abrasives for cleaning since this can damage it.

Main Unit

- Rinse the main unit with water.
- Use liquid soap or water to remove hard-to-reach dirt. Use only pH neutral detergents.
- Never use caustic and abrasive substances (eg. vinegar or lime scale solvents), since it may do harm to the device.
- Never immerse the main unit into water.
- After washing, wipe the main unit dry with a cloth.

9. POTENTIAL PROBLEMS

Problem	Cause	Remedy
Irrigator does not operate	You have just purchased the device or it has not been used for more than 3 months	Charge the battery for 24 hours before first use, and then for 4 hours.
Irrigator operates only for several minutes after charging	The battery fully cycles or about to end	Contact the service center.
Low water pressure	The nozzle is clogged	Replace the nozzle.
Water does not come from nozzle	The nozzle is not inserted correctly	Check the battery for 24 hours
There's water leakage between the nozzle and the device	The nozzle is not inserted correctly	Check the nozzle is inserted correctly
Water leaks from the device	The seal is damaged	Contact the service and consulting center.
Water leaks from the device	Incorrect use of the device	Use the device in strict accordance with this operating manual.

10. BATTERY AND DEVICE DISPOSAL

Upon expiry of the device operating life and prior to disposal be sure to remove the batteries. Do not throw the eye and hand protector while removing the battery. Dispose of the battery separately from the main electronic unit. In case of questions related to battery removal from the electronic unit, please contact the service center or call the helpline.

Environmental protection and recycling:

The device is fitted with lithium-ion battery. Please make sure that the battery is disposed of in an officially designated location, if it is over one year old. Do not disassemble or replace batteries by keeping the device. We have replaced only an authorised service center. The device itself must be disposed of in accordance with applicable regulations and must not be disposed of with household wastes.

11. SPECIFICATIONS

Battery charging time:	24 hours before first use, then within 4 hours.
Battery operating life:	up to 1500 cycles (charger/discharger)
Run time on one charge:	60 minutes
Dimensions (w x h x d):	265 x 195 x 79 mm
Weight:	217 g
Water tank capacity:	500 ml
Operating time with full tank:	With standard mode: 40-60 sec With soft mode: 85 sec With manual mode: 100 sec
Water pulse frequency:	1400-1800 pulses per minute
Minimum/maximum jet pressure:	200.8- 726.8 kPa
Auto power off:	in 2 minutes of running
Storage conditions:	from -10°C to +40°C, RH: 85% max.
Use conditions:	from -10°C to +40°C, RH: 85% max.

Protect the device from drops and strong shocks. Keep the device away from high temperature areas and avoid direct sunlight.

12. EXPLANATION OF SYMBOLS FROM PACKAGE AND LABEL

READ INSTRUCTIONS BEFORE USE	DISPOSAL (RECYCLING) COLLECTION	CLASS EQUIPMENT	CE MARK	HOLDING NUMBER PROTECTION RATE
------------------------------	---------------------------------	-----------------	---------	--------------------------------

SN	REF	OPERATING/CHARGING TEMPERATURE	STORAGE/CONDITION TEMPERATURE	LOT
SERIAL NUMBER	ARTICLE NUMBER	10°C - 40°C	-10°C - 40°C	Batch number

The device production date is coded in its label, in the serial number (SN). The first two digits mean the week of manufacture, the second two figures - the year of manufacture.

STANDARD NOZZLES FOR PRO-911 irrigator

- ORTHODONTIC** nozzle: Ideal for cleaning bridges, braces and crowns. Effectively clean all components of artificial structures. Recommended period of use before replacement - 6 months.
- TONGUE CLEANING** nozzle: Suitable for daily tongue cleaning. Remove bacterial plaque and freshen breath. Recommended period of use before replacement 6 months.
- PERIODONTAL** nozzle: Designed for cleaning gum margin and gingival pockets, as well as for cleaning denture surface under prosthesis and dental bridges. Recommended period of use before replacement - 6 months.

ORTHODONTIC Nozzle for PRO-911 irrigator

Ideal for cleaning bridges, braces and crowns. Effectively clean all components of artificial structures. Recommended period of use before replacement - 6 months.

TONGUE CLEANING Nozzle for PRO-911 irrigator

Suitable for daily tongue cleaning. Remove bacterial plaque and freshen breath. Recommended period of use before replacement 6 months.

PERIODONTAL Nozzle for PRO-911 irrigator

Designed for cleaning gum margin and gingival pockets, as well as for cleaning denture surface under prosthesis and dental bridges. Recommended period of use before replacement - 6 months.

IRRIGATOR nozzles PRO-911 for IMPLANTS, BRIDGES, CROWNS, VENEERS

Designed for delicate cleaning of the surface of implants, bridges, crowns and veneers.

GETTING READY TO WORK

Press On/Off button to switch the device on/off. Press Mode button to select the desired water jet mode (normal, soft, pulse). The mode selected will be shown by the mode indicator. If you want to use a different mode press the mode switch until it changes to the desired setting. Pressing the mode switch will change the mode from Normal to Soft and Pulse.

NOTE: When you use the device for the first time, press the On/Off button to turn it on and test each of the water jet modes with the tank filled with water.

MODES OF OPERATION

The modes causes a change in the water jet pressure setting and is reflected on the side panel of the device by the respective mode indicator.

- Normal mode** is designed for effective oral cleaning, removal of food particles.
- Soft mode** is designed for gentle and delicate cleaning of sensitive teeth and gums.
- Pulse mode** is designed for cleaning and massaging gums.
- CHARGE** - When charging is complete, all the three indicators will light up continuously. When the device has finished charging, all three indicators will light up continuously.

5. CHARGING THE DEVICE

To charge the device, use the USB cable that is included in the set and the adapter that is not included after removing the cap for the charging socket. It is also possible to use other chargers (power banks). It is also possible to use other Micro USB chargers. Only certified chargers with a 5V, 1000 mA DC output voltage.

While the irrigator is charging, all indicators on the side panel will flash alternately. When charging is complete, all the three indicators will light up continuously. If the indicator flashes during the charging, it means that the device must be recharged.

After charging is completed, close the charging socket with a cap.

6. USING THE DEVICE

Insert the nozzle into the relevant recess of the main unit. To extract the nozzle, press the nozzle release button and pull the nozzle upwards. Fill the tank with water by any one of the suggested methods.

NOTE: The device must be charged before first use. Using the device while charging is prohibited.

Press On/Off button to switch the device on/off. Press Mode button to select the desired water jet mode (normal, soft, pulse). The mode selected will be shown by the mode indicator. If you want to use a different mode press the mode switch until it changes to the desired setting. Pressing the mode switch will change the mode from Normal to Soft and Pulse.

NOTE: When you use the device for the first time, press the On/Off button to turn it on and test each of the water jet modes with the tank filled with water.

MODES OF OPERATION

The modes causes a change in the water jet pressure setting and is reflected on the side panel of the device by the respective mode indicator.

- Normal mode** is designed for effective oral cleaning, removal of food particles.
- Soft mode** is designed for gentle and delicate cleaning of sensitive teeth and gums.
- Pulse mode** is designed for cleaning and massaging gums.
- CHARGE** - When charging is complete, all the three indicators will light up continuously. When the device has finished charging, all three indicators will light up continuously.

5. CHARGING THE DEVICE

To charge the device, use the USB cable that is included in the set and the adapter that is not included after removing the cap for the charging socket. It is also possible to use other chargers (power banks). It is also possible to use other Micro USB chargers. Only certified chargers with a 5V, 1000 mA DC output voltage.

While the irrigator is charging, all indicators on the side panel will flash alternately. When charging is complete, all the three indicators will light up continuously. If the indicator flashes during the charging, it means that the device must be recharged.

After charging is completed, close the charging socket with a cap.

6. USING THE DEVICE

Insert the nozzle into the relevant recess of the main unit. To extract the nozzle, press the nozzle release button and pull the nozzle upwards. Fill the tank with water by any one of the suggested methods.

NOTE: The device must be charged before first use. Using the device while charging is prohibited.

Press On/Off button to switch the device on/off. Press Mode button to select the desired water jet mode (normal, soft, pulse). The mode selected will be shown by the mode indicator. If you want to use a different mode press the mode switch until it changes to the desired setting. Pressing the mode switch will change the mode from Normal to Soft and Pulse.

NOTE: When you use the device for the first time, press the On/Off button to turn it on and test each of the water jet modes with the tank filled with water.

MODES OF OPERATION

The modes causes a change in the water jet pressure setting and is reflected on the side panel of the device by the respective mode indicator.

- Normal mode** is designed for effective oral cleaning, removal of food particles.
- Soft mode** is designed for gentle and delicate cleaning of sensitive teeth and gums.
- Pulse mode** is designed for cleaning and massaging gums.
- CHARGE** - When charging is complete, all the three indicators will light up continuously. When the device has finished charging, all three indicators will light up continuously.

5. CHARGING THE DEVICE

To charge the device, use the USB cable that is included in the set and the adapter that is not included after removing the cap for the charging socket. It is also possible to use other chargers (power banks). It is also possible to use other Micro USB chargers. Only certified chargers with a 5V, 1000 mA DC output voltage.

While the irrigator is charging, all indicators on the side panel will flash alternately. When charging is complete, all the three indicators will light up continuously. If the indicator flashes during the charging, it means that the device must be recharged.

After charging is completed, close the charging socket with a cap.

6. USING THE DEVICE

Insert the nozzle into the relevant recess of the main unit. To extract the nozzle, press the nozzle release button and pull the nozzle upwards. Fill the tank with water by any one of the suggested methods.

NOTE: The device must be charged before first use. Using the device while charging is prohibited.

Press On/Off button to switch the device on/off. Press Mode button to select the desired water jet mode (normal, soft, pulse). The mode selected will be shown by the mode indicator. If you want to use a different mode press the mode switch until it changes to the desired setting. Pressing the mode switch will change the mode from Normal to Soft and Pulse.

NOTE: When you use the device for the first time, press the On/Off button to turn it on and test each of the water jet modes with the tank filled with water.

MODES OF OPERATION

The modes causes a change in the water jet pressure setting and is reflected on the side panel of the device by the respective mode indicator.

- Normal mode** is designed for effective oral cleaning, removal of food particles.
- Soft mode** is designed for gentle and delicate cleaning of sensitive teeth and gums.
- Pulse mode** is designed for cleaning and massaging gums.
- CHARGE** - When charging is complete, all the three indicators will light up continuously. When the device has finished charging, all three indicators will light up continuously.

5. CHARGING THE DEVICE

To charge the device, use the USB cable that is included in the set and the adapter that is not included after removing the cap for the charging socket. It is also possible to use other chargers (power banks). It is also possible to use other Micro USB chargers. Only certified chargers with a 5V, 1000 mA DC output voltage.

While the irrigator is charging, all indicators on the side panel will flash alternately. When charging is complete, all the three indicators will light up continuously. If the indicator flashes during the charging, it means that the device must be recharged.

After charging is completed, close the charging socket with a cap.

6. USING THE DEVICE

Insert the nozzle into the relevant recess of the main unit. To extract the nozzle, press the nozzle release button and pull the nozzle upwards. Fill the tank with water by any one of the suggested methods.

NOTE: The device must be charged before first use. Using the device while charging is prohibited.

Press On/Off button to switch the device on/off. Press Mode button to select the desired water jet mode (normal, soft, pulse). The mode selected will be shown by the mode indicator. If you want to use a different mode press the mode switch until it changes to the desired setting. Pressing the mode switch will change the mode from Normal to Soft and Pulse.

NOTE: When you use the device for the first time, press the On/Off button to turn it on and test each of the water jet modes with the tank filled with water.

MODES OF OPERATION

The modes causes a change in the water jet pressure setting and is reflected on the side panel of the device by the respective mode indicator.

- Normal mode** is designed for effective oral cleaning, removal of food particles.
- Soft mode** is designed for gentle and delicate cleaning of sensitive teeth and gums.
- Pulse mode** is designed for cleaning and massaging gums.
- CHARGE** - When charging is complete, all the three indicators will light up continuously. When the device has finished charging, all three indicators will light up continuously.

5. CHARGING THE DEVICE

To charge the device, use the USB cable that is included in the set and the adapter that is not included after removing the cap for the charging socket. It is also possible to use other chargers (power banks). It is also possible to use other Micro USB chargers. Only certified chargers with a 5V, 1000 mA DC output voltage.

While the irrigator is charging, all indicators on the side panel will flash alternately. When charging is complete, all the three indicators will light up continuously. If the indicator flashes during the charging, it means that the device must be recharged.

After charging is completed, close the charging socket with a cap.

6. USING THE DEVICE

Insert the nozzle into the relevant recess of the main unit. To extract the nozzle, press the nozzle release button and pull the nozzle upwards. Fill the tank with water by any one of the suggested methods.

NOTE: The device must be charged before first use. Using the device while charging is prohibited.

Press On/Off button to switch the device on/off. Press Mode button to select the desired water jet mode (normal, soft, pulse). The mode selected will be shown by the mode indicator. If you want to use a different mode press the mode switch until it changes to the desired setting. Pressing the mode switch will change the mode from Normal to Soft and Pulse.

NOTE: When you use the device for the first time, press the On/Off button to turn it on and test each of the water jet modes with the tank filled with water.

Scop:

Irigatorul PRO-911 cu accesorii este destinat:

- tratamentului și prevenirii bolilor gumei gingivale, parodontitei, peri-implantitei, sângerării gingivale;
- îngrijirii medicale și estetice tesuturilor gingivale și al țesuturilor mucoase orale;
- prevenirii formării cariei dentare și sângerării a gingivalei și a țesuturilor mucoase orale;
- îngrijirii complete a cavitațiilor bucale, inclusiv a spațiilor interdente și a cavitațiilor gingivale;
- curățării eficiente a structurii ortodontice și ortopedice.

Contraindicații:

Înainte de a utiliza irigatorul, se recomandă consultarea unui medic stomatolog în cazul unei intervenții chirurgicale în cavitatea bucală și în caz de exstare a unei boli cronice de nivel cavitar și bucal. În cursul primelor câteva aplicații este posibil să apară o ușoară sângerare a gingivale și a țesuturilor mucoase orale datorită sângerării din cauza procedurii de curățare și a țesuturilor mucoase orale. Dacă sângerarea continuă după 2 săptămâni, nu mai utilizați irigatorul și consultați-vă medicul stomatolog. Nu utilizați duză având răni deschise pe limba sau în cavitatea bucală. Consultați-vă medicul după orice leziune.

3. COMPONENTA PRODUSULUI LIVRAT

- Irigatorul oral
- Doze standard (2 buc)
- Rezervor de apă
- Cablul USB
- Charging socket cap
- Manualul de utilizare recomandat înainte de folosire este de 6 luni
- Instrucțiuni de garanție
- Card de utilizare
- Căști

NOTĂ: Este posibil să existe umiditate în rezervorul de apă sau în furnitura de aspirație la momentul achiziționării. Acesta este unmeza lăzută de apă distilată utilizată pentru testarea produsului și este sigură pentru consum.

Pentru irigatorul PRO-911 de la B.Well, puteți achiziționa în plus un set de duze:

IMPORTANT: Pentru a ține persoana, fiecare membru al familiei ar trebui să folosească propria duză. În acest scop, trebuie să marcați cu diferite culori.

2 DUZE STANDARD pentru irigatorul PRO-911

Curățarea spațiilor interdente de bacterii și resturi alimentare. Masajul gingivale în mod delicat și ușor și îndepărtarea bacteriilor, impurităților, coroanelor și aparatelor dentare. Se recomandă să fie utilizată la fiecare 6 luni.

Duza de CURĂȚAREA A LIMBII pentru irigatorul PRO-911

Potrivită pentru curățarea zilnică a limbii. Îndepărtarea plăcii bacteriene și împănărtarea resturilor. Perioada de utilizare recomandat înainte de înlocuire este de 6 luni.

Duza PARODONTALĂ pentru irigatorul PRO-911

Conceptul pentru curățarea gingivalei marginilor gingivale și a spațiilor gingivale, precum și pentru curățarea suprafețelor dentare de sub proteză și a punțiilor dentare. Perioada de utilizare recomandat înainte de înlocuire este de 6 luni.

Duze pentru irigatorul PRO-911 pentru IMPLANTURI, PUNȚI, COROANE, FAȘETE DENTARE

Conceptul pentru curățarea delicată a suprafețelor implanturilor, punțiilor, coroanelor și fașetelor dentare

